

**OWNER'S OPERATING
MANUAL
for
STINSON
1947**

**VOYAGER
AND
FLYING STATION WAGON**

**THIS MANUAL IS A DIRECT COPY
OF THE ORIGINAL. WE ASSUME NO
RESPONSIBILITY FOR THE CONTENTS.
UNIVAIR AIRCRAFT CORPORATION**

TABLE OF CONTENTS

	Page
CHAPTER I	
Design Features.....	1
CHAPTER II	
Operating Instructions	21
CHAPTER III	
Operating Limitations	33

CHAPTER I

DESIGN FEATURES

GENERAL

1. The Stinson airplanes for 1947 are four-place, high-wing, cabin monoplanes equipped with 165 horsepower Franklin engines. The overall dimensions are as follows: wing span, 33 feet 11 inches; length (at rest), 24 feet; and height (at rest with propeller horizontal), 7 feet.
2. There are two models of the Stinson, the VOYAGER and the FLYING STATION WAGON. The voyager cabin is trimmed with upholstery and cloth and, when the rear seats are removed, is approved for 350 pounds of baggage or cargo in the rear of the cabin. The Flying Station Wagon cabin is trimmed with wood and leather and, when the rear seats are removed, is approved for 600 pounds of baggage or cargo in the rear of the cabin.
3. These models are licensed by the Civil Aeronautics Administration under Airworthiness Type Certificate Number 767 for operation in two categories, Normal and Utility. The category in which it falls is determined by the gross weight of the airplane. In the normal category, a gross weight of 2250 pounds is allowed; in the utility category, 1925 pounds is specified. When loaded in the normal category, no acrobatic maneuvers are permitted. If the airplane comes within the utility category, only the maneuvers noted in Paragraph 5, Chapter III are allowed. Persons are not allowed to occupy the rear seats during operations involving acrobatic maneuvers.

DESIGN

4. Inherent stability is designed into the Stinson airplanes. Slots in the wing leading edge in front of the ailerons smooth the flow of air over the ailerons and thus provide improved stability and control at high angles of attack. The all-metal vertical stabilizer is slightly offset at its forward attaching point to counteract engine torque.
5. Wing flaps are provided and when lowered, increase the wing lift for take-off and serve as air-brakes for landing. Since the wing flaps, when raised, become a part of the wing trailing edge, there is little sacrifice of cruising performance for the benefits obtained by the use of the flaps.



6. The sound level in the cabin is greatly reduced by sound-proofing installed in the four walls, floor, and ceiling of the cabin. The noise commonly associated with airplanes is lessened by the incorporation of mufflers in the engine exhaust system. These two sound reductions, accompanied by improvements in radio construction, permit the use of an overhead loudspeaker so that all passengers may enjoy radio reception.

SURFACE CONTROLS AND BRAKES

7. The ailerons and elevator are operated by dual control wheels and shafts. The full *up travel* of the elevator is obtained only when the flaps are lowered. When the flaps are raised, a stop in the elevator system engages the flap control lever limiting the elevator *up travel* to approximately nine degrees less than full *up travel*.

8. The flaps are operated by a control lever located between the two front seats. A locking device in the control mechanism allows the flaps to be set in any one of three positions: *raised, take-off, or landing*. The flaps are raised fully when the control lever is in the position nearest the floor. Disengage the locking device by pressing the button on the end of the control lever. Do not fly at speeds greater than 88 mph with flaps down.

9. The elevator trim tab is operated by a hand crank located overhead. There is a tab position indicator on the placard of the crank assembly. This control is provided to correct the airplane for *nose heavy* or *tail heavy* conditions, usually caused by variations of loading arrangements or power.

10. The rudder trim control is operated by a knob located in the center of the elevator trim tab crank. The placard contains a rudder trim indicator. This control is provided to correct the airplane from tendencies to fly either to the right or to the left, usually caused by the difference in power applications when climbing, cruising, or gliding.

11. The rudder and steerable tail wheel are controlled by either set of pedals. The brake toe-pedals are attached to, and extend above, the left set of rudder pedals. The brakes can be set for parking by pulling out the parking brake control knob while the brakes are depressed. The brakes can be used for turning the airplane while taxiing, but to avoid

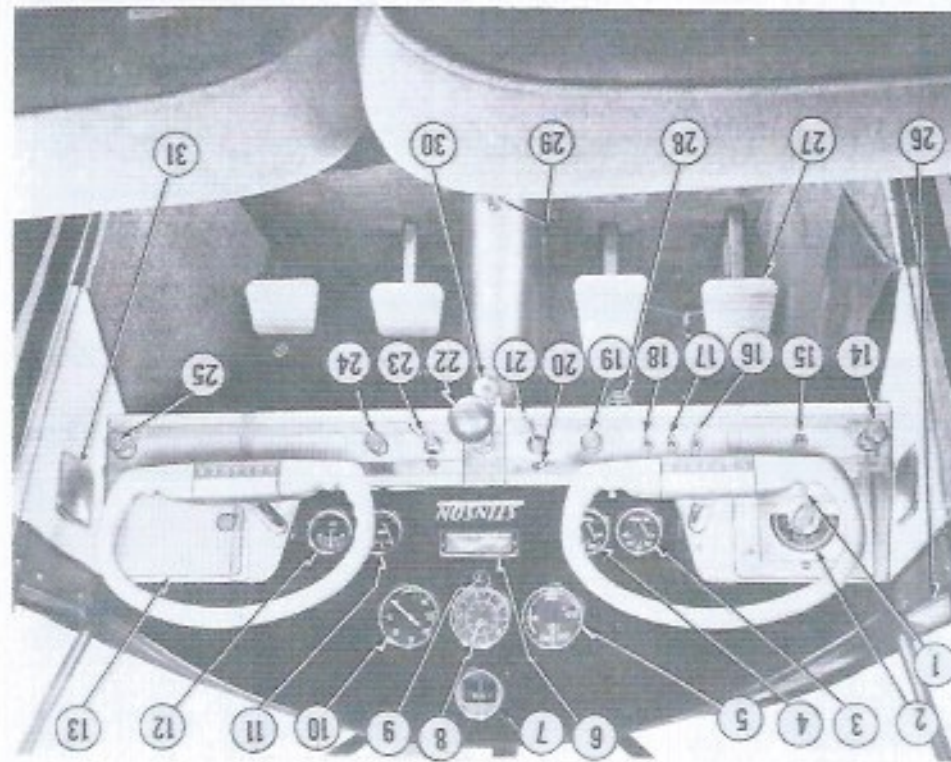


Figure 1 - Front of Cabin

1. Transmitting Indicator
2. Radio
3. Oil Pressure Gauge
4. Oil Temperature Gauge
5. Airspeed Indicator
6. Compass Correction Card
7. Compass
8. Altimeter
9. Altimeter Adjusting Knob
10. Tachometer
11. Fuel Quantity Gauge
12. Ammeter
13. Glove Compartment
14. Parking Brake Control
15. Microphone Socket
16. Master Switch
17. Position Lights Switch
18. Landing Lights Switch
19. Carburetor Heat Control
20. Fuel Gauge Switch
21. Fuel Tank Selector Valve
22. Throttle
23. Starter-Ignition Switch
24. Mixture Control
25. Cabin Heat Control
26. Operating Limitations Placard
27. Rudder and Brake Pedals
28. Panel Lights Dimmer
29. Flap Control Handle
30. Engine Primer
31. Ash Receptacle

on the instrument panel. The altimeter can be set to the proper pressure altitude by turning the adjusting knob at the base of the dial.

13. The airspeed indicator is marked with colored lines and letters to show the various speed range limitations of the airplane. The green arc indicates the normal operating range. The white arc, inscribed alongside the green arc, indicates the permissible speed range with the flaps down. A yellow arc indicates the speed range at which the airplane should be operated with caution to avoid abrupt maneuvers. Red radial lines and letters on the instrument indicate maximum speeds permissible: "N" for maximum speed in the normal category (gross weight between 1925 and 2250 pounds); and "U" for maximum speed in the utility category (gross weight 1925 pounds or less).


14. The compass can be adjusted for deviation by turning the compensating screws on the face of the instrument with a non-magnetic screw driver. The compensating screws are located at the extreme top of the instrument and are marked "N-S" and "E-W" to indicate the adjustment that can be made by turning the screws. The compass correction card is beneath the compass. The compass is compensated with the radio off. Radio receiving and transmission may effect a deviation of the compass not registered on the card.

ENGINE CONTROLS AND INDICATORS

15. All of the power plant controls and indicators, except the oil level dip stick, are mounted on the control and instrument panels. The control panel, beneath the main panel, extends the width of the cabin. The oil level dip stick is on the right rear side of the engine crankcase, inside the engine baffles.

16. The throttle control, located in the center of the control panel, is the push-pull type. A knurled locking nut adjusts the friction applied to the push-pull rod and determines the ease with which the throttle control can be adjusted. By turning the nut clockwise, the throttle control can be locked in any position. Engine speed is increased by pushing the throttle control toward the control panel.

17. The fuel selector valve, mounted on the aft side of the firewall, is operated by a torque rod and a combination handle and pointer on the control panel. The position of the valve determines from which tank

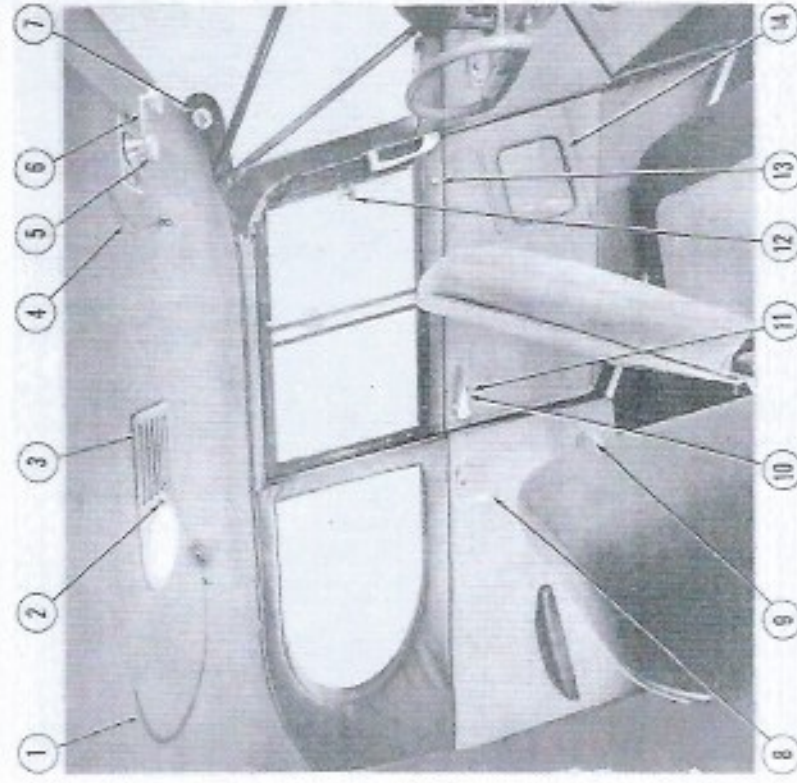

1. Aileron and Flap Controls Access Zipper
2. Dome Light Switch
3. Radio Loud-Speaker
4. Trim Tab Control Access Zipper
5. Rudder Trim Control Knob
6. Elevator Trim Tab Control
7. Cabin Ventilator

8. Ash Receptacle
9. Baggage Limitation Placard
10. Door Handle
11. Door Lock
12. Window Lock
13. Aircraft Data File

*On 165 horsepower airplanes only

Figure 2 - Left Side of Cabin

excessive brake wear, the steerable tail wheel should be used as the principal means of steering when on the ground.

FLIGHT INSTRUMENTS

12. The altimeter, the airspeed indicator, and the compass are mounted

fuel can flow to the engine. The valve can be set to any one of three positions: *left tank, right tank, or off*. When the valve handle is turned to the *off* position, all fuel is shut off from the engine at the valve.

18. The engine primer control knob is on the lower edge of the control panel, below the throttle control. To prime the engine, turn the control knob to unlock primer; pull the knob out as far as possible, then push it back to the normal position. Maximum recommended initial priming is three strokes, see Chapter II, Paragraph 24. When the primer is not being used, it must be locked *securely in the normal position*.

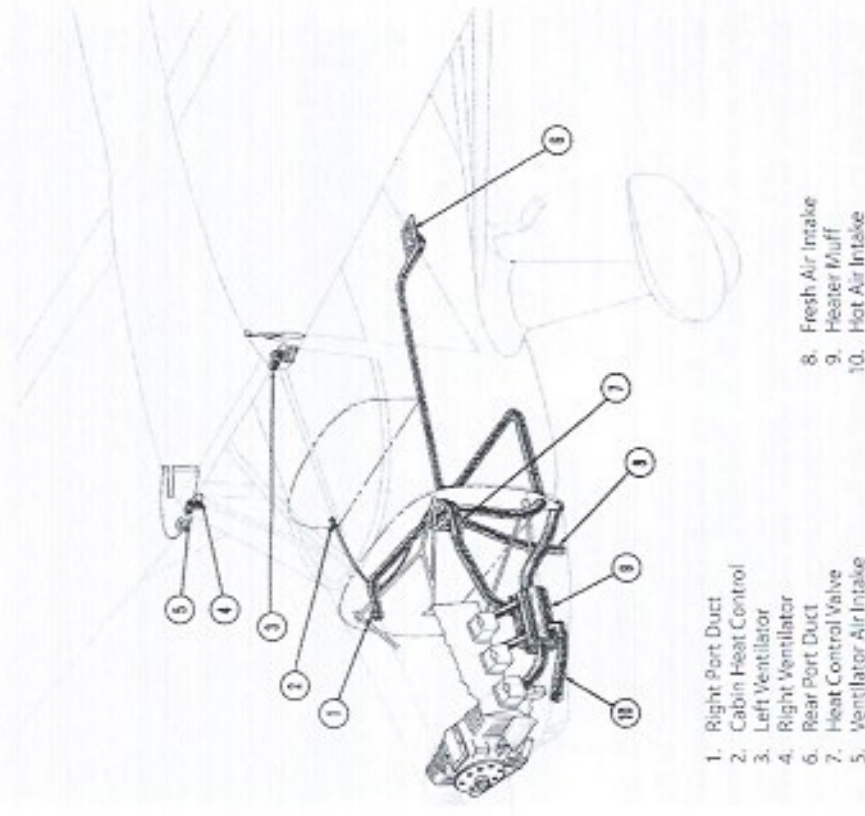


Figure 3 – Heating and Ventilating System

19. The combination starter and ignition switch is mounted on the control panel to the right of the throttle control. A stop incorporated within this switch prevents the switch from being turned to *start* position unless the button directly above the handle is depressed. The switch is spring loaded and will return to the *both magnetos* position from the *start* position when the switch is released. Both magnetos are *on* with the switch in *start* position.

20. The carburetor heat control knob is mounted on the control panel to the left of the fuel selector valve control. As the control knob is pulled out, an increasing amount of heated air enters the carburetor. When the control knob is pulled all the way out, only heated air enters the carburetor. A mixture of cold and heated air enters the carburetor when the knob is set at intermediate points. The carburetor heat control can be locked in any position to provide any desired mixture of hot and cold air. The control knob must be *turned* to unlock the push-pull rod before the control can be set at the desired position.

21. The primary purpose of carburetor air heat is to eliminate or prevent carburetor icing. Use carburetor heat during engine warm-up and during climb whenever there is danger that ice will form in the carburetor. Ice is most likely to form in the carburetor when the outside air temperature is between 20 and 68 degrees Fahrenheit. Use heat also during any prolonged glide or descent. Any time the engine loses speed without apparent cause, the use of carburetor heat may correct the condition. During cold weather operation, below 30 degrees Fahrenheit, the use of carburetor heat may be required for full throttle operation of the engine.

22. The mixture control knob, mounted on the control panel to the right of the ignition-starter switch, regulates the amount of fuel in the fuel-air mixture going into the engine. With the control pushed in, the mixture is *full rich*. Pulling the knob out leans the mixture progressively until, at full extension of the control, the *idle cut-off* stops the flow of fuel at the carburetor.

23. When flying at altitudes greater than 3000 feet above sea level, use mixture control to lean carburetor fuel-air mixture to obtain smooth engine performance. Stop engine by pulling the mixture control full out to the *idle cut-off* position and slowly opening the throttle.

24. The tachometer, oil pressure gauge, and oil temperature gauge are mounted on the instrument panel. An indicator that registers accumulated hours of engine operation, recording equivalent time at 2566 rpm, is an integral part of the tachometer. The safe range for continuous engine speed is marked on the tachometer by a green arc extending from 2000 rpm to 2800 rpm. The red radial line at 2800 rpm indicates the rated engine speed.
25. The oil pressure gauge is mounted to the right of the left control wheel. The safe operating pressure range for the engine is marked on this instrument by a green arc with red radial lines at its extremities, 35 psi minimum and 55 psi maximum. Do not operate the engine at full throttle when the oil pressure is outside of these limits.
26. The oil temperature gauge is mounted to the right of the oil pressure gauge. The normal operating temperature range for the engine is marked on this instrument by a green arc. The yellow arc indicates the temperature at which the engine may be operated with caution, and a red radial line indicates the extreme high temperature of 230 degrees Fahrenheit that must never be exceeded. The caution range is from 60 to 80 degrees Fahrenheit.

HEATING AND VENTILATING

27. The cabin heat control knob regulates the temperature of the air entering the cabin through three heater ports. With the control pushed in, unheated air enters through the ports and when the control is pulled out, heated air is supplied. The temperature of the incoming air is regulated according to the amount the knob is pulled out. Outlets for the front seats are located on the firewall under the instrument panel on each side of the cabin. A grilled outlet, located in the cabin floor just behind the front seats, is provided for the rear of the cabin. These outlets may be individually closed to modify the distribution of air as desired.
28. Additional ventilation is provided by two ports admitting fresh air; one at each upper corner of the windshield. These vents are opened by pulling out the cylindrical tubes. The tube may be rotated to direct a stream of fresh air in any desired direction.

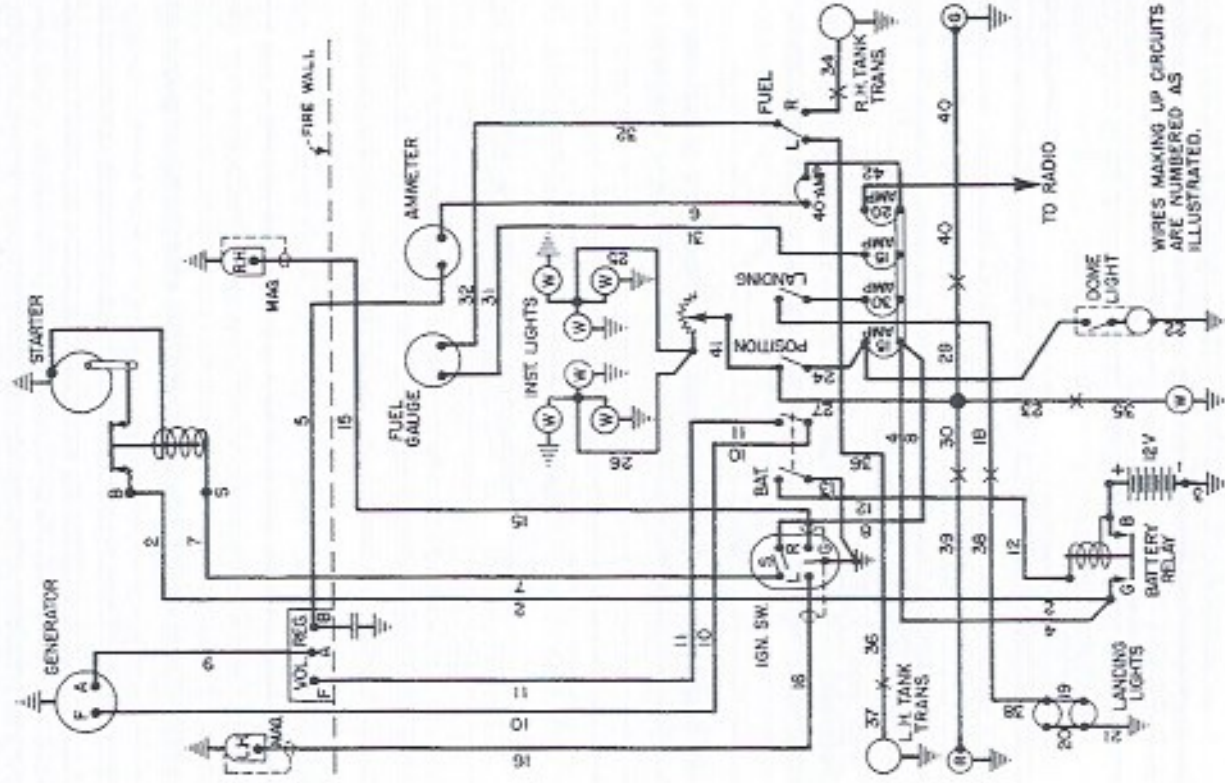


Figure 4 - Electrical System Diagram

ELECTRICAL SYSTEM

29. A 12-volt battery and engine-driven generator supply power for the single wire type electrical system. The battery and its case are mounted under the left front seat. The case is vented and provided with a drain to prevent acid damage to the airplane or injury to its occupants. The battery supplies the power to start the engine. The generator supplies energy to the electrical system after the engine is operating at sufficient speed. Electrical power from the generator is fed into the electrical system through a voltage regulator that maintains constant voltage in the system. Power from both the battery and the generator is supplied to a main bus from which current is drawn for the various electrical circuits.

30. The master switch control is a combination battery relay switch and generator field switch and must be *on* before current is supplied to the electrical system. When the master control switch is *on*, the battery relay closes and allows the battery to supply current to the main bus; it also completes the generator field circuit that allows the generator to develop voltage. The airplane may be operated in flight with the master control switch *off*, but the generator will not charge, nor will any electrical equipment operate.

31. The electrical system is divided into the following main circuits: engine starting, navigation and panel lights, dome light, landing lights, fuel tank level gauge, and radio. The main bus, from which power for the various circuits is taken, is mounted on the forward side of the control panel, under the radio. Current for the circuits, except the starter and starter control circuits and the battery relay circuit, passes through automatic resetting circuit breakers. When an overload exists, the circuit breaker will open the circuit. After a brief interval, the circuit breaker automatically closes the circuit, but if the overload remains, the circuit is again opened. This procedure continues until the overload is eliminated. Intermittent operation of units in a defective circuit is an indication that an overload exists, in which case turn *off* the switch that controls the defective circuit, or turn *off* master switch, until the trouble is corrected.

32. In addition to the master switch control, there are four other switches on the control panel: the ignition-starter switch must be *on* before any of these are operative except the ignition part of the ignition starter switch.

1. Radio
2. Antenna Loading Coil
3. Loud Speaker
4. Overhead Antenna
5. Loop Antenna
6. Microphone
7. Headphone Socket

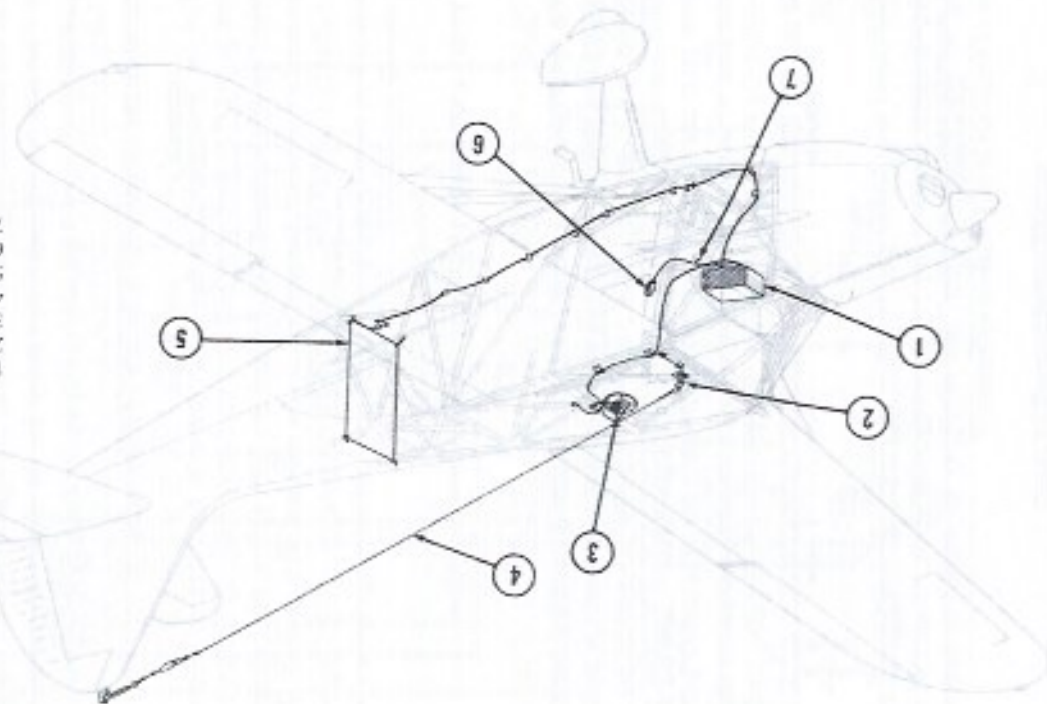


Figure 5 - Radio System Diagram

33. The combination ignition-starter switch is mounted on the control panel. Pushing the button above the ignition switch handle allows turning the switch to *start*. The switch is spring loaded and must be held on *start*. When released, the switch returns to *both*.

34. The position lights switch operates the navigation lights on the wing tips and on the trailing edge of the rudder, and the instrument panel lights. The intensity of the panel lights is regulated by a rheostat mounted on the lower edge of the control panel, below the carburetor heat control knob.

35. By means of the fuel gauge selector switch, which is located above the fuel selector control, the level of fuel in either the left or the right

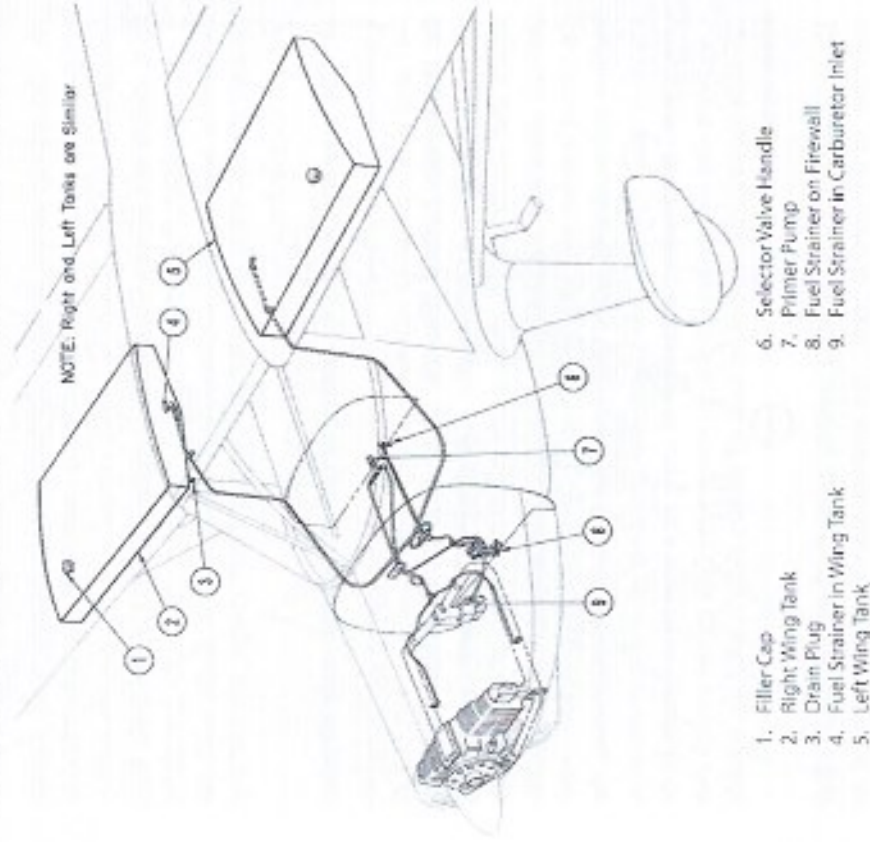


Figure 6 - Fuel System

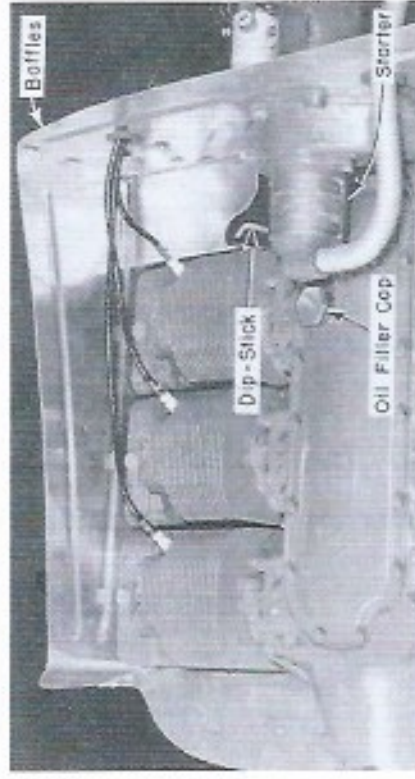


Figure 7 - Oil Filler Cap and Dip Stick

wing tank can be made to register on the single fuel gauge. When the toggle of the switch is to the *left*, the level of fuel in the left tank registers on the gauge; when the toggle is to the *right*, the gauge registers the fuel level in the right tank. The selector switch is not an *on-off* type switch and is only energized when the master switch is *on*.


36. The dome light switch is in the light fixture, and the radio switch is built into the radio.

RADIO

37. The Stinson Voyager and Flying Station Wagon airplanes are equipped with Hallcrafters Skyfone two-way radios. The major components of the radio equipment are a transmitter-receiver unit, a loudspeaker, and a microphone. Two jacks are provided, one for the microphone and the other for headphones. Headphones are not normally required because of the loudspeaker installation.

38. The airplane is equipped with two antennae, an external antenna that extends from the top of the cabin to the vertical stabilizer, and a fixed loop antenna inside the fuselage, aft of the cabin. The loop is perpendicular to the longitudinal axis of the airplane so that homing is accomplished by flying the null.

39. Transmission may be accomplished at any setting of the radio controls as long as the radio is operating. The transmitter is activated by

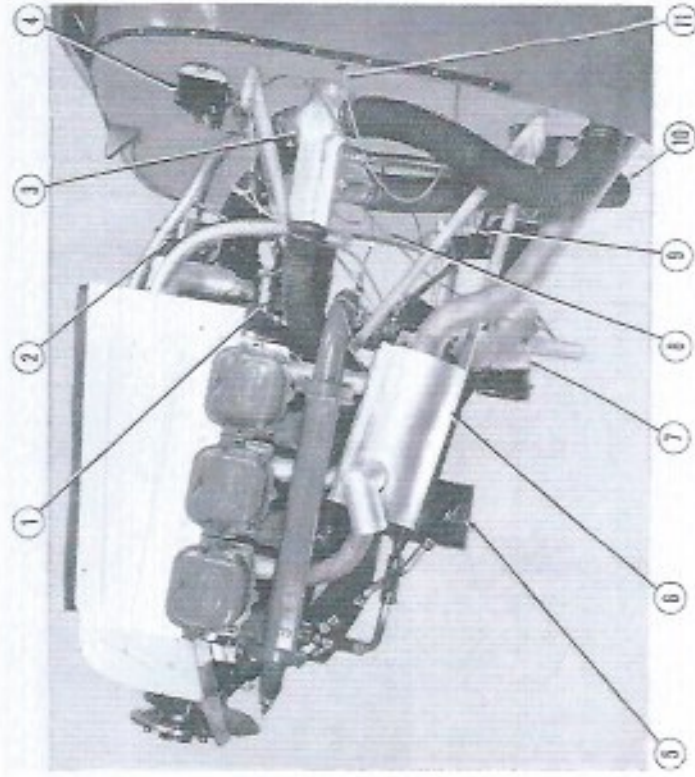


- | | |
|--------------------------|--------------------------------|
| 1. Generator | 7. Carburetor Air Mixing Box |
| 2. Starter | 8. Carburetor Air Heat Control |
| 3. Cabin Heater Valve | 9. Oil Drain |
| 4. Voltage Regulator | 10. Cabin Fresh Air Intake |
| 5. Oil Cooler | 11. Parking Brake Control |
| 6. Cabin Air Heater Muff | |

Figure 8 - Left Side of Engine

pressing the button on the microphone. The pin-point light just below the radio dial will glow during transmission to indicate the strength of the energy being dispensed.

FUEL SYSTEM

40. The fuel supply is in two 20 gallon tanks, one in each wing panel. Use 80 octane unleaded aviation fuel. The net usable fuel capacity of each tank is 18 gallons; the remaining being the non-usable residual fuel in the tanks, the weight of which is included in the airplane empty

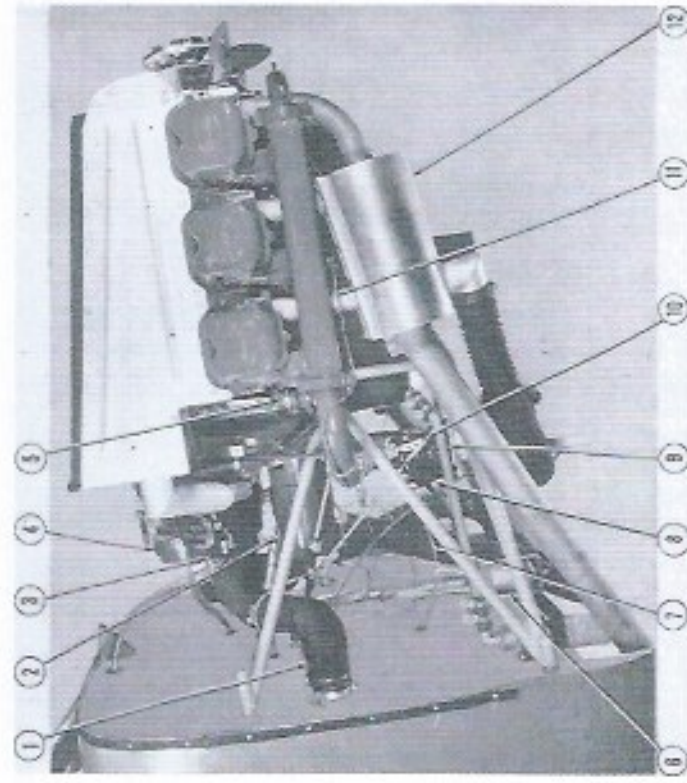

- | | |
|-----------------------|--------------------------------|
| 1. Cabin Heater Duct | 7. Mixture Control |
| 2. Generator | 8. Carburetor |
| 3. Right Magneto | 9. Oil Drain |
| 4. Starter | 10. Throttle Control |
| 5. Engine Shock Mount | 11. Primer Line |
| 6. Fuel Strainer | 12. Carburetor Air Heater Muff |

Figure 9 - Right Side of Engine

weight. Fuel flows by gravity from the wing tanks to the carburetor and is drawn from either the right or left tank or shut off entirely by means of the fuel selector valve. Fuel for the primer is taken from the main fuel line through the strainer attached to the firewall. There are four strainers in the fuel lines, one at each point where the fuel lines are connected to the fuel tanks, another attached to the firewall, and a fourth where the fuel line is attached to the carburetor. Quick acting drains are provided at the low point of each fuel tank so that tanks may be bled to avoid the accumulation of water. The fuel tank filler necks extend above the upper surface of the wing.

41. The fuel gauge is mounted on the instrument panel. By means of the fuel gauge selector switch, located above the fuel selector valve control, the level of fuel in either the left or the right wing tank can be made to register on the fuel gauge. The fuel remaining in the tank when the gauge reads *E* cannot safely be used in flight.

OIL SYSTEM

42. Nine quarts of oil are carried within the engine crankcase. Use motor oil of the following viscosity:

Summer (Above 40°F).....SAE 40
Winter (Below 40°F).....SAE 20

A dip-stick for measuring the quantity of oil in the engine is accessible upon lifting the right engine cowl panel. The stick is on the top right side of the engine crankcase, inside the baffles. Never operate the engine with less than 5 quarts of oil in the crankcase. Oil pressure and temperature gauges are mounted on the instrument panel. (See paragraphs 25 and 26.)

ENGINE AND ENGINE ACCESSORIES

43. The powerplant is an air-cooled, six-cylinder, horizontally opposed, 165 horsepower Franklin engine. The rated maximum continuous engine speed is 2800 rpm. The propeller is mounted directly on the crankshaft.

44. The engine accessories include a starter, a generator, two magnetos, a carburetor, a carburetor air filter, an oil cooler, and a carburetor heater muff. The starter is mounted on the top aft end of the engine crankcase. The magnetos are below and on each side of the starter, and the generator is directly below the starter and between the magnetos. The carburetor is attached to the lower aft end of the engine. The oil cooler and carburetor air filter are mounted beneath the forward end of the engine. The carburetor heater muff is attached to the right exhaust manifold and the muff for cabin heat is on the left exhaust manifold.

ACCOMMODATIONS

45. Seats are provided for four persons. The front seats are adjustable

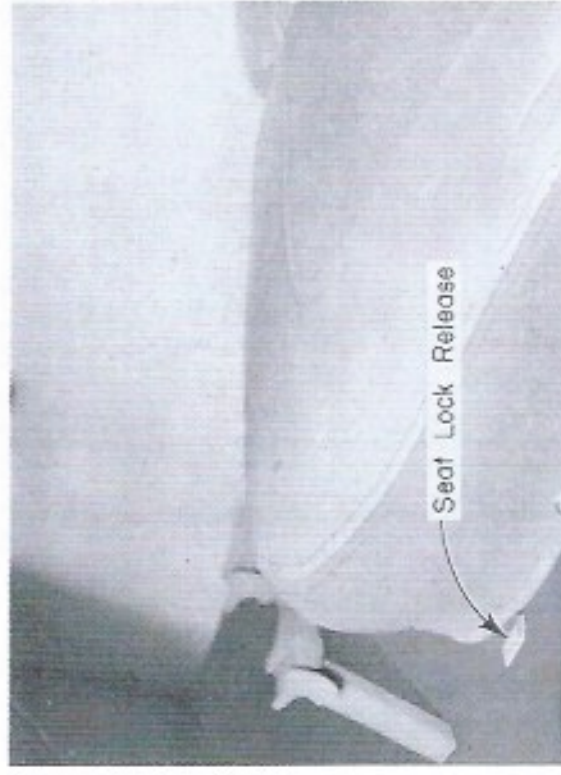


Figure 10 - Seat Lock Release

and can be moved forward or back by releasing a locking device shown in Figure 10. The backs of both front seats fold forward permitting entrance to the rear seats.

46. The rear seats are the hammock type and are not adjustable. Three straps support each of the rear seats and either or both seats can be removed easily. Each seat is provided with a safety belt. Inasmuch as the lower cushions are not secured, it is recommended that the safety belts be strapped across the rear seat cushions when these seats are not occupied.

47. The entrance doors on each side of the cabin can be locked. Both doors can be locked from inside the airplane by turning down a lever beneath the door handle. The left door is provided with a key lock and can be locked from outside the airplane. The doors have two-piece windows, the forward panel of which slides back. To unlock the window, depress the lever at the forward edge.

48. Stowage space for small articles is provided by a glove compartment on the instrument panel, and by two pockets in the upholstery. One pocket is on the back of the right front seat and another is on the left



1. Rear Heater Port 2. Map Pocket

Figure 11 - Rear of Voyager Cabin

side of the cabin just forward of the cabin door. There are ash receivers in the cabin wall at the side of each seat.

BAGGAGE COMPARTMENT

49. The baggage compartment aft of the cabin is designed to carry 100 pounds and has a capacity of eleven cubic feet. Baggage placed in this compartment need not be tied down. This compartment is accessible



1. Rear Safety Belts 2. Cargo Retainer Straps 3. Rear Heater Port 4. Map Pocket

Figure 12 - Rear of Flying Station Wagon Cabin

through a door in the right side of the fuselage, aft of the cabin. This door is provided with a key lock. When opening this door, press firmly on the door beside the lock to compress the rubber seal around door and relieve pressure on the latch. Turn key counter-clockwise to open door.

50. Removal of either or both sections of the rear seat will make the rear of the cabin available for larger baggage or light cargo. The forward tube across the cabin may also be removed. To remove either

seat section, lift off the lower seat cushion, unfasten the drape from the floor, and unlock the canvas hammock straps.

VOYAGER LOADING

51. Any combination of baggage, passengers, and fuel may be carried that does not exceed any one of the following limitations. The rear seat can not be occupied during the performance of acrobatic maneuvers.

(a) Do not exceed 2230 pounds gross weight. See Actual Weight and Balance sheets for airplane weight empty.

(b) Do not exceed most rearward Center of Gravity position permissible. See Operating Limitations Manual for effect of baggage on Center of Gravity position.

(c) Do not exceed 350 pounds on floor in rear of cabin. This is the maximum load for which the floor structure is approved.

52. Securely fasten all loads. With the rear seat removed, the safety belts and their lugs on the floor may be used to secure baggage or cargo.

FLYING STATION WAGON LOADING

53. The Flying Station Wagon loading limitations are the same as for the Voyager as given in paragraph 51, except for the rear of the cabin. A maximum load of 90 pounds per square foot, not to exceed a total of 600 pounds, is permissible on the floor with the rear seats removed.

54. A sling is provided to secure cargo loads against forward motion. The straps on each side are attached to the rear outer seat belt lugs. Position sling over the upper forward corner of the cargo and draw all buckles tight. Keep load a minimum of eight inches aft of front seat back.

CHAPTER II

OPERATING INSTRUCTIONS

PREPARATION

1. In preparing for flight, it is important that the operation of every component of the airplane be checked. Malfunctioning of the primary controls and equipment must be discovered and remedied before flight, and it is well to know what units of secondary equipment (radio, lights, brakes, etc.) can be relied upon even though their use may not be anticipated in the flight to be made. The following list is provided as a guide in checking the operation of the airplane and its components.

2. Ascertain that there are no repairs in progress on the airplane that will render it unsafe for flying.

3. Remove pitot tube cover and any other installed weather covers.

4. Inspect the main wheel tires for correct air pressure (21 psi).

5. Bleed each fuel tank sump (see Figure 6) to remove any water that may have accumulated.

6. Check air duct openings in engine cowl nose and bottom cowl for litter and obstructions. Carburetor air filter should be removed to prevent plugging by snow during the winter months.

7. Measure oil level with the dip stick. The dip stick is just aft of the rear cylinder on the right side. Unscrew the dip stick to remove it. The crankcase oil capacity is nine quarts.

8. Bleed fuel strainer on firewall to remove any water that may have accumulated.

9. Check spark plug insulators for cleanliness so that dirt and moisture will not decrease intensity of the spark.

10. Check flight controls (ailerons, elevator, flaps, and rudder) for freedom of operation.

NOTE

The control system is designed so that the elevator *up* travel is restricted when the flaps are raised.

11. Turn elevator trim tab crank to full travel each way and then return to neutral.
12. Turn rudder trim control knob to full travel each way and then return to neutral.
13. Test operate brake pedal operation. If pedal action is soft and unresponsive, there is air in the hydraulic lines which should be removed before take-off.
14. Turn master switch *on*.
15. Check quantity of fuel in each tank. Turn fuel gauge selector switch to *R* for right tank and *L* for left tank reading.
16. Turn fuel selector valve *on* to the tank that has the greater quantity of fuel.
17. Set altimeter to the *pressure-altitude* of field.
18. Check operating condition of the radio receiver and transmitter. Pinpoint light beneath radio dial should glow when button on microphone is pressed.

CAUTION

Transmitter check should be made only when control tower frequency is clear. Be brief; transmit only messages essential to safety of life and property in the air. (See Sections 9.62 and 9.91 of Federal Communications Commission's Rules and Regulations.)

19. Test operate all lights. If instrument panel lights are not bright, turn the rheostat located under the switch panel. Make an independent and quick inspection of the landing lights.

CAUTION

Radiation of landing light heat becomes critical when the airplane is not in flight.

20. Be certain that the weight limits, specified in Operation Limitations Manual, are not exceeded by the load of passengers and/or baggage to be carried. When rear seats are removed, be certain that baggage is securely lashed in place. Use of the rear safety belts or

special sling is recommended.

ENGINE STARTING

21. Prime carburetor with three strokes of the throttle. Set throttle control *in* approximately $\frac{1}{4}$ inch.
22. Push mixture control all the way in to *full rich*.
23. Unlock primer control and prime with no more than three strokes, depending on temperature of engine. A warm engine does not need priming. During cold weather starting, occasional operation of the primer may be necessary for thirty seconds after initial starting.

CAUTION

Be certain that primer control is locked *in* after priming. If this is not done, primer may leak, causing over-rich mixture and excessive use of fuel during flight.

24. Push the button just above the ignition switch handle to allow the switch to turn to *start*. The switch is spring loaded and must be held on the *start* position. When the engine fires, release the switch and allow it to return to *both*. Starter is not operative until master switch is *on*.

CAUTION

If no oil pressure is indicated within 30 seconds after engine starts, stop engine. The oil system should be investigated and the trouble remedied before operating the engine.

25. If the engine does not start, and if fuel drips from the drain or from the exhaust pipes, the carburetor is flooded or the engine is over-primed; consequently, turn ignition switch *off*, pull mixture control out to *idle cut-off*, open throttle to *full open*, and rotate the propeller several revolutions by hand, backwards to the normal rotation. Then try starting again.

26. Refer to General Service Manual for additional causes and remedies for refusal of the engine to start.

WARM-UP

27. When the engine starts, move the throttle smoothly but rapidly

to limit the speed to between 900 and 1000 rpm. After oil pressure is at least 20 psi, warm up at 1000 rpm until oil temperature begins to rise. During cold weather starting, below 25 degrees Fahrenheit, do not exceed 1500 rpm for five minutes to allow oil warm-up.

GROUND TEST

28. Turn the fuel selector valve to the left tank and to the right tank long enough to insure proper engine performance from either tank. One minute on each tank will be sufficient.

29. Open the throttle until 2000 rpm is attained. The engine instruments should read as follows:

Oil Pressure	40 to 45 psi
Oil Temperature	(Registering)
Tachometer	2000 rpm
Ammeter	(Charging)

Do not operate the engine above 1600 rpm on the ground longer than necessary to test the instruments, nor operate the engine below 1000 rpm for long idling periods as it will cause fouling of the plugs.

CAUTION

The pressure baffle cooling system used on the airplane requires forward speed to cool the engine. Under no circumstances operate the engine at or near full throttle longer than is necessary for a quick reading of the instruments.

30. With the engine running at 800 rpm, turn the ignition switch *off* momentarily. If the engine does not stop firing, a defective magneto ground connection is indicated. Stop the engine by pulling the mixture control full *out* to the *idle cut-off* position and slowly opening the throttle. Keep clear of the propeller until the source of the trouble is located and remedied.

31. At 2000 rpm, test the magnetos by switching from *both* to *R* for a moment. If any of the cylinders miss fire, it indicates one or more faulty spark plugs in the upper level of the left bank of cylinders or in the lower level of the right bank. Return the ignition switch to *both*. Turn the ignition switch from *both* to *L* for a moment. If any of the cylinders miss fire, it indicates one or more faulty spark plugs in the lower level

of the left bank of cylinders or in the upper level of the right bank. Return the ignition switch to *both*.

32. A drop in tachometer reading when operating on one magneto should not be more than 200 rpm from that of operation on *both*. Make the test as quickly as possible to prevent damage from detonation. During cold weather, below 30 degrees Fahrenheit, use of carburetor heat may correct stumbling of engine when operating on single magneto ignition.

TAXIING

33. Be certain that the main wheels are not stuck or mired before attempting to taxi.

CAUTION

Never attempt to free airplane by lifting or pushing up on the lift struts.

34. Release the parking brake, applying pressure to the brake pedals, and then pushing the control knob *in*.

35. The rudder pedals operate the tail wheel to steer the airplane on the ground. The brakes can be used for turning the airplane when taxiing, but to avoid excessive brake wear, the steerable tail wheel should be used as the principal means of steering when on the ground.

TAKE-OFF

36. The quickest take-off is obtained when the flap control is placed in the first notch.

37. Take-off distances at various altitudes and temperatures are shown on Figure 13. Included in the distance given by these curves is that required to climb to 50 feet above the field. The data from which the curves were derived was obtained during flight tests conducted under the following conditions:

2250 Pounds Gross Weight
Full Throttle - Wing Flaps Up
Zero Wind
Take-Off From Hard Surface Runway

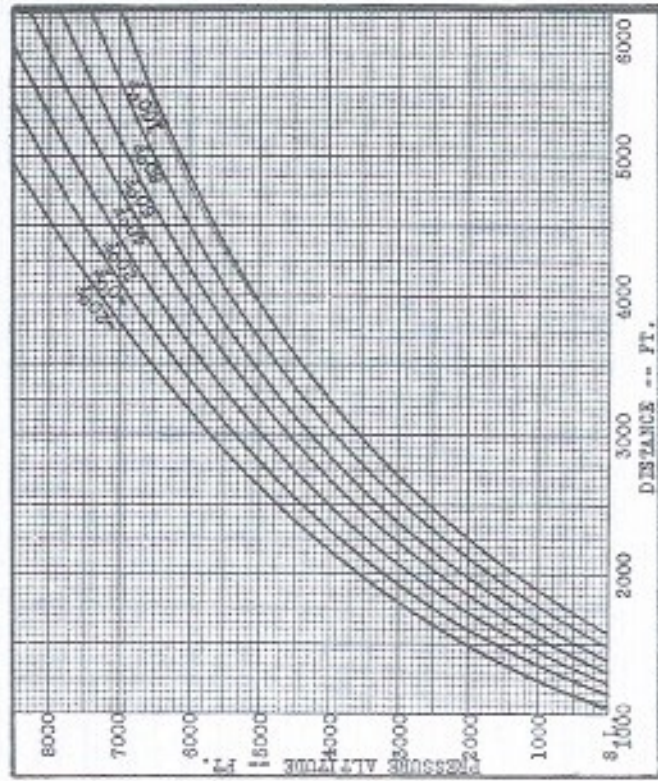


Figure 13 - Take-Off Over Obstacle Distance

38. The data shown on these curves is not to be confused with the equivalent data given in the Approved Operation Limitations. This latter data is based upon the certification flight tests of the 150 horsepower airplane during which a definite airspeed was specified to be attained by the time the airplane reached the obstacle.

39. When take-off is accomplished with flaps down, raise flaps gradually after sufficient altitude has been attained to clear all ground hazards.

CLIMB

40. The best rate of climb is obtained with the flaps UP and maintaining an airspeed of about 80 mph.

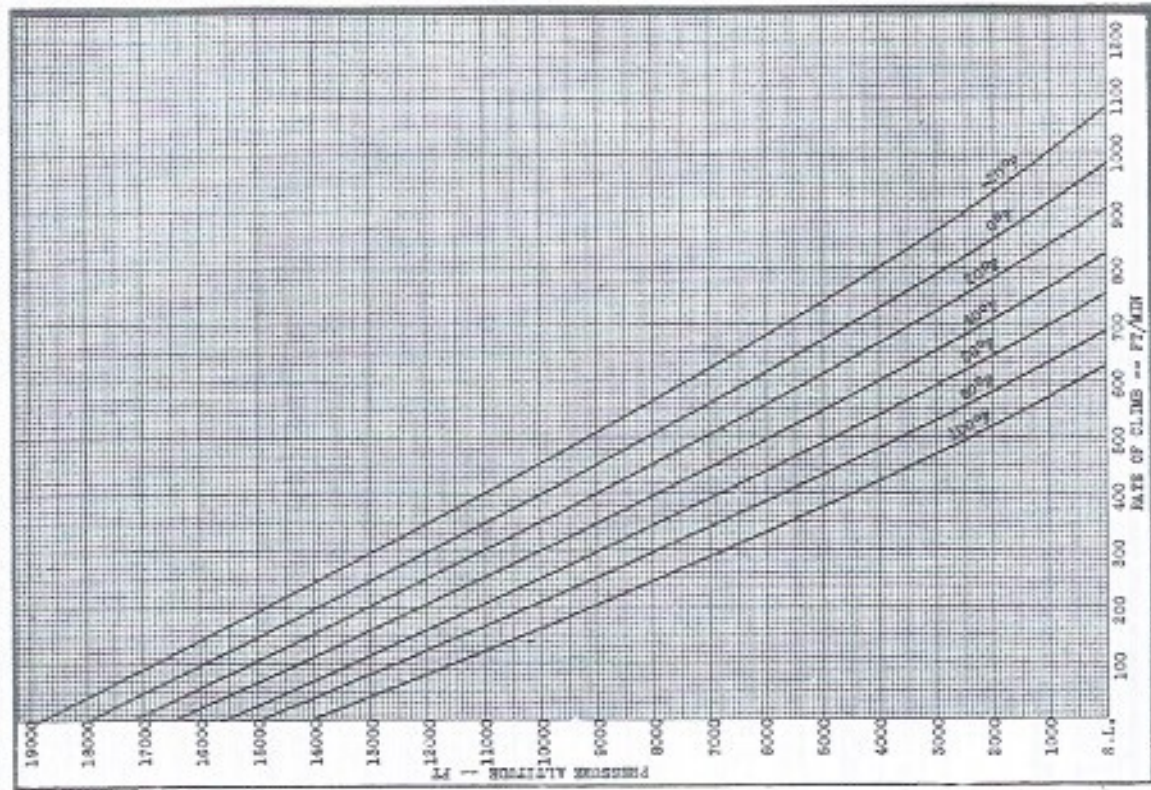


Figure 14 - Rate of Climb

STINSON

41. Climbing characteristics of the airplane at various altitudes and temperatures are shown on Figure 14. The data from which these curves were derived was obtained during flight tests conducted under the following conditions:

2230 Pounds Gross Weight

Wing Flaps UP

Full Throttle

42. The data shown on these curves differs from the equivalent data shown in the Approved Operating Limitations since this data is based on the use of 165 horsepower, while the latter is based on the use of 150 horsepower.

STALLS

43. The stalling speed of the airplane is very much affected by the flaps and the gross weight. The following speeds have been determined by flight tests:

	2230 lbs	1925 lbs
Gross Weight	Gross Weight	Gross Weight
Stalling Speed - Flaps UP.....	67 mph	58 mph
Stalling Speed - Flaps DOWN	57 mph	54 mph

44. The speed at which the airplane stalls is also affected by the angle of bank as shown in the following table.

Angle of Bank (Deg.)	0	10	20	30	40	50	60
Flaps UP	67	68	69	72	77	84	95
Flaps DOWN	57	58	59	61	65	71	81

CRUISE

45. The cruising airspeed and engine rpm will depend upon the propeller installed on the airplane. Due to production variation, propellers of the same make and design will give different level flight, full throttle engine speeds. The following table will aid in determining the proper cruising condition for any one airplane. The upper set of figures refer to a fixed pitch propeller. The lower set of figures refer to the high pitch position of a two-position propeller.

OPERATING INSTRUCTIONS

Level Flight Full Throttle	Cruising with 83% Power		Cruising with 75% Power	
RPM	RPM	Gal/Hr	RPM	Gal/Hr
2900	2730	13.0	2645	11.5
2850	2680	12.0	2595	10.5
2800	2630	11.5	2550	10.0
2600	2490	12.5	2400	10.5
2550	2460	11.5	2370	10.0
2500	2430	11.0	2340	9.5

Cruising with 83 percent power is the maximum cruising condition recommended. The design cruising condition is that with 75 percent power. It is suggested that the level flight, full throttle engine rpm be determined by trial.

46. The figures given in the gallons per hour column are gallons of fuel for each actual hour of flight time at the given rpm.

47. When flying at altitudes greater than 3000 feet above sea level, adjust mixture control to obtain maximum engine speed after setting throttle.

48. Use carburetor air heater to prevent and eliminate carburetor ice and to maintain smooth full throttle operation of the engine. Icing conditions are most likely when the outside air temperature is between 20 and 68 degrees Fahrenheit. Engine may require heat for smooth operation at temperatures below 20 degrees F.

49. The airplane must be operated within the limits given in the CAA approved Operating Limitations Manual located in the side pocket on the left door.

APPROACH

50. Determine fuel quantity in each tank and turn both the fuel valve and the indicator switch to the fullest tank.

51. Pull carburetor heat control to *on* position and frequently open the throttle to clear the engine and to prevent too rapid cooling during the approach.

2230 Pounds Gross Weight
Wing Flaps Full Down
Zero Wind
Landing on a Hard Surface Level Runway

56. The brakes need not be used in every landing, especially since the airplane can land in a short distance. The steerable tail wheel should be used as the principal control for steering after contacting the ground.

EMERGENCY TAKE-OFF IF NO LANDING POSSIBLE (BALKED LANDING)

57. Push throttle smoothly to full open.
58. Hold the control wheel forward to prevent climbing until speed is regained.
59. After regaining speed, raise flaps gradually to obtain best climb.

STOPPING THE ENGINE

60. Idle engine at 600 rpm for minimum of one minute to allow proper cooling.
61. To stop the engine pull mixture control all the way out to *idle cut-off* and simultaneously push throttle to full open. After engine stops,

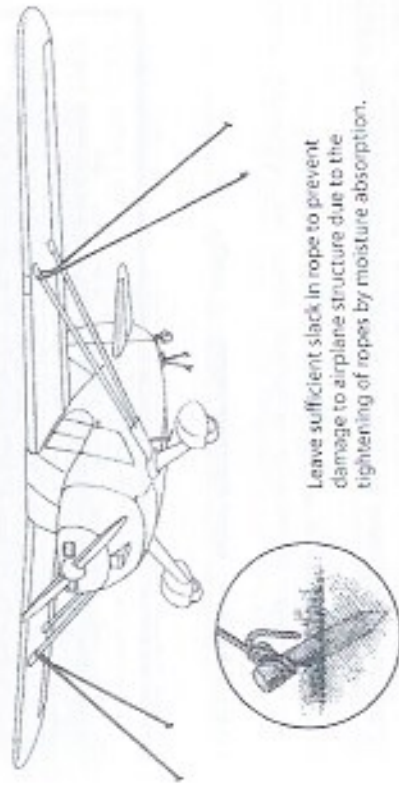


Figure 16 - Mooring

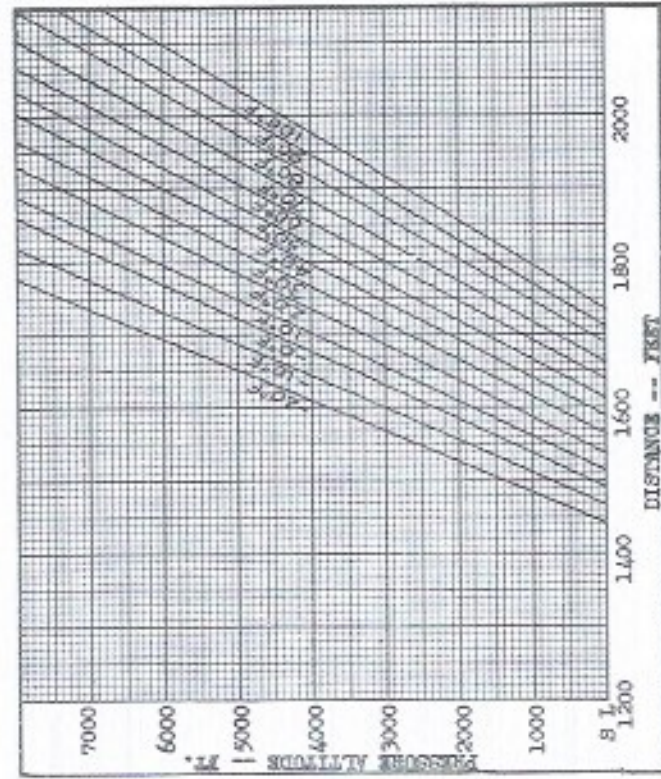


Figure 15 - Landing Over Obstacle Distance

52. Push mixture control in to *full-rich* position unless field is above 3000 feet and mixture must be leaned for smooth engine operation.
53. Set the flap control in the second notch to lower flaps all the way for maximum lift and drag during landing. Do not lower flaps at airspeeds above 88 mph.
54. Set elevator trim tab to maintain desired gliding speed.

LANDING

55. Landing distance at various altitudes and temperatures are shown on Figure 15. Included in the distance given by these curves is that required to contact the ground from an altitude of 50 feet above the field at an approach speed of 74 mph. The data from which these curves were derived was obtained during the CAA Certification flight tests conducted under the following conditions:

turn ignition switch *off*. Leave mixture control in *idle cut-off* position as a precaution against accidental starting.

BEFORE LEAVING AIRPLANE

62. Turn all switches off.
63. Set the parking brake.
64. Lower the flaps to prevent buffeting when parked outside.

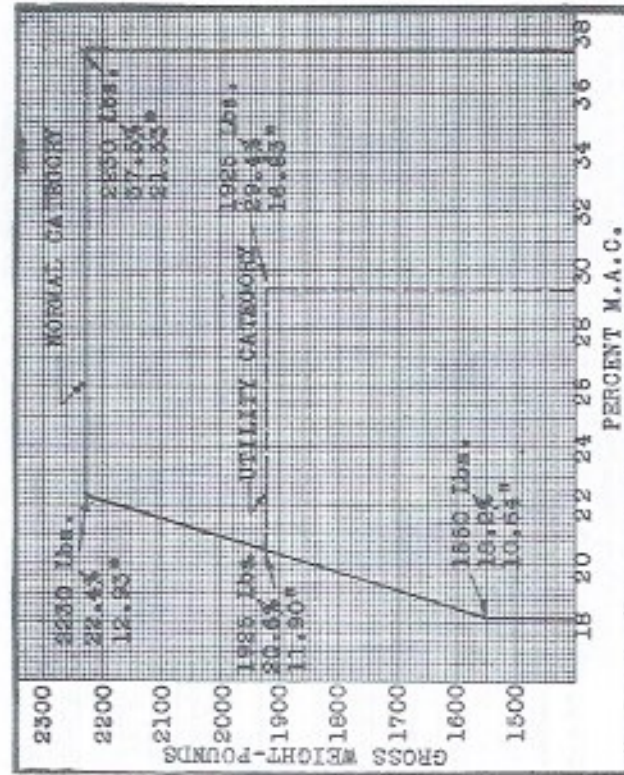


Figure 17 - Center of Gravity Limits

CHAPTER III

OPERATING LIMITATIONS

For Complete Operation Limitations See CAA Approved Operating Limitations in Data Case on Left Door.

WEIGHT AND CENTER OF GRAVITY

1. The center of gravity location for any given gross weight must be within the limits shown on Figure 17. To convert figures for percent MAC into inches wing chord, multiply percent MAC by 55.50 and add .52 inches to this product. Wing leading edge is the reference line from which the center of gravity is located.

2. The maximum gross weight for each category is as follows:

Normal Category 2230 Pounds

Utility Category 1925 Pounds

The empty weight of the airplane and its corresponding center of gravity is given on the Actual Weight and Balance sheets located in the Operating Limitations Manual. This manual also contains a list of standard equipment included in the empty weight of the airplane.

AIRSPEED

3. The airspeed limitations for each category are as follows:

	Normal Category	Utility Category
Never Exceed Speed	153 mph TIAS	164 mph TIAS
Design Cruising Speed	121 mph TIAS	121 mph TIAS
Maneuvering Speed	115 mph TIAS	117 mph TIAS
Flaps Down Speed	88 mph TIAS	88 mph TIAS

MANEUVERS

4. No acrobatic maneuvers including spins are approved when operating the airplane in the Normal Category.
5. Only those acrobatic maneuvers listed below are approved when operating the airplane in the Utility Category. No inverted or snap maneuvers are approved.

- Chandelle
- Lazy Eight
- Stall (Except Whip Stall)
- Steep Turn
- Spin (Intentional Spins Prohibited with Flaps Down)

The rear seat is not to be occupied during the performance of maneuvers.

INSTRUMENT MARKINGS

6. The markings on the airspeed indicator are located as follows: The never exceed speeds of 164 and 153 is the maximum safe airspeed for airplane operating. These are marked with red radial lines, one bearing the letter "U" for Utility Category, and one bearing the letter "N" for Normal Category.

A yellow arc extends from the never exceed speed to 121, the design cruising speed. This is the range in which the airplane should be operated with caution as it is possible to exceed the design load accelerations.

A green arc extends from 121, the design cruising speed, to 67, the stalling speed, flaps UP and 2230 gross weight. This is the normal cruising range.

The flap operating range is marked by a white arc extending from the design flap speed, 88, (maximum speed at which the flaps can be lowered), to the stalling speed, 57, with the flaps down at 2230 gross weight.

7. The empty position on the fuel gauge is marked in red, as the fuel remaining in the tank when the pointer is at this mark cannot safely be used in flight.

8. A red radial line is marked on the oil temperature gauge at 230 which is the maximum permissible oil inlet temperature.

9. A red radial line is marked on the tachometer at 2800 which is the rated engine speed.

10. A green arc is marked on the tachometer from 2000 to 2800 which is the normal operating range of the engine.

INDEX

- | | |
|--------------------------------------|---------------|
| — A — | — D — |
| Accessories — Engine | 16 |
| Access Zippers | 4, 17 |
| — Cabin Ceiling | 4 |
| Adjustment — Seats | 16 |
| Aileron Controls | 3 |
| Air Filter | 16 |
| Aircraft Data File | 4 |
| Airspeed Indicator | 2, 5 |
| Airspeed Limits | 5, 33 |
| Altimeter | 2, 4 |
| Ammeter | 2, 8 |
| Antennae | 10, 13 |
| Ash Receptacle | 2, 4 |
| — B — | — F — |
| Baggage | 4, 18 |
| Battery | 11 |
| Battery Relay | 8 |
| Brakes | 2 |
| — C — | — G — |
| Cabin — Front | 2 |
| Cabin — Heater | 2, 6, 9 |
| Cabin — Left Side | 4 |
| Cabin — Rear | 18, 19 |
| Cabin Ventilator | 4, 9 |
| Carburetor | 15, 16 |
| Carburetor Heater | 2, 7, 14 |
| Cargo Tie Down | 19 |
| Category | 1 |
| Center of Gravity Limits | 32, 33 |
| Certification | 1 |
| Circuit Protectors | 11 |
| Climb | 26, 27 |
| Compass | 2, 5 |
| Controls — Engine | 5 |
| Controls — Surface | 3 |
| Cruise | 28 |
| Filler Cap — Fuel | 12, 15 |
| Filler Cap — Oil | 13 |
| Flap Control | 2, 3 |
| Flight — Preparation For | 21 |
| Fuel Gauge | 2, 8, 16 |
| Fuel System | 12, 14 |
| Fuel Valve | 2, 5, 12 |
| — H — | — I — |
| Generator | 8, 11, 14, 15 |
| Glove Compartment | 2 |
| Headphone Socket | 10 |
| Heating and Ventilating System | 6, 9, 18, 19 |
| Ignition Switch | 2, 7, 8, 12 |
| Instruments — Engine | 2, 9 |
| Instruments — Flight | 2, 4 |
| Instrument Markings | 34 |

— L —

Landing 30
 Landing Lights 2, 8
 Loading Limitations 20
 Lock - Door 17
 Loop Antenna 10, 13
 Loud Speaker 4, 10

— M —

Magneto 8, 14, 15, 16
 Maneuvers 34
 Map Pocket 18, 19
 Master Switch 2, 8, 11
 Microphone 2, 10
 Mixture Control 2, 7, 15
 Mooring 31

— O —

Oil Cooler 14, 16
 Oil Dip Stick 5, 13
 Oil Drain 14, 15
 Oil Pressure Gauge 2, 9
 Oil Temperature Gauge 2, 9
 Oil System 16
 Operating Limitations 2, 33
 Overhead Antenna 10, 13

— P —

Panel Lights Rheostat 2, 12
 Parking Brake Control 2, 14
 Position Lights Switch 2, 12
 Primer 2, 6, 12, 15, 23

— R —

Radio 2, 10, 13
 Rudder Control 2, 3
 Rudder Trim Control 3, 4

— S —

Seats 16, 17
 Stalls 28
 Starter 7, 8, 14, 15, 16
 Starter Switch 2, 7, 12

— T —

Tachometer 2, 9
 Take-Off 25
 Taxiing 25
 Throttle 2, 5, 15
 Transmission - Radio 2, 13
 Trim Control Access Zipper 4

— V —

Ventilator 6
 Voltage Regulator 8, 11, 14

— W —

Windows 4, 17
 Weight Limits 32, 33